

PRODUCT DESCRIPTION: Headlight
APPLICATION: 2018 and up Ford F-150



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: 7mm Socket. 8mm socket. 10mm socket. Panel Popper

STEP 1



Stock 2018 F-150

STEP 2



Open engine hood then disconnect negative battery terminal.

STEP 3



Remove 14 body panel clips from radiator shroud.

STEP 4



Location of 14 body panel clips on radiator shroud.

STEP 5



Remove radiator shroud and set aside.

STEP 6



Remove four 10mm bolts on top of radiator grill.

STEP 7



Location of four top 10mm radiator bolts.

STEP 8



Remove two 7mm bolts in fender well holding lower headlight valance.

STEP 9



Pull lower valance outwards to unclip from vehicle. Repeat on opposite side.

STEP 10

Remove lower headlight valance and set aside.

STEP 11

Remove lower side 8mm radiator grill bolt located under headlight. Repeat on opposite side.

STEP 12

Remove two connectors from top of radiator grill.

STEP 13

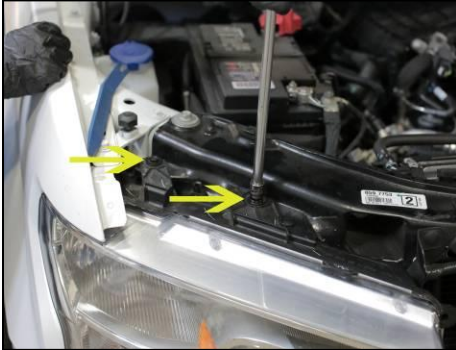
Remove body panel retainer clip holding harness from top of radiator grill.

STEP 14

Lift up on radiator grill to clear bottom rubber molding then pull straight forward and set grill aside.

STEP 15

Remove top forward 10mm bolt holding headlight to side bumper mount.

STEP 16

Remove top 8mm and 10mm headlight bolts.

STEP 17

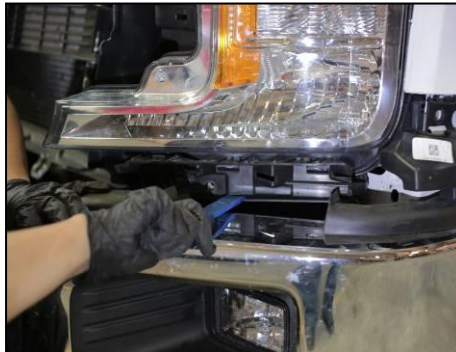
Remove body panel clip from top of headlight.

STEP 18

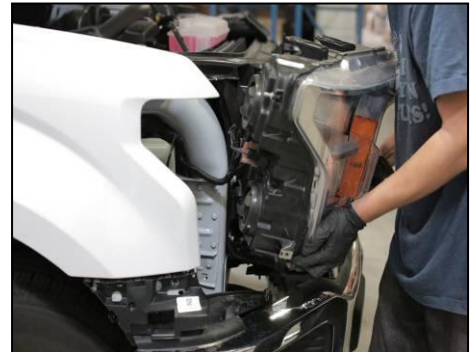
Remove two lower 10mm headlight bolts.

STEP 19

Unhook side headlight clip to release headlight from side bumper mount.

STEP 20

Use panel popper under headlight to separate from air dam.

STEP 21

Pull headlight out slowly to remove.

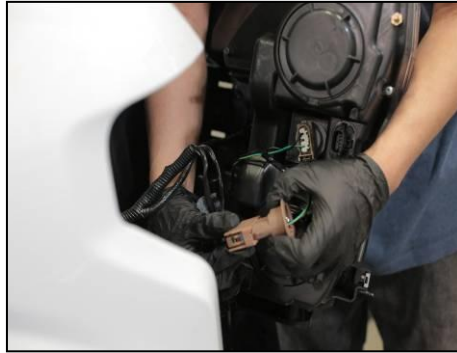
AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith. © 2008 AnzoUSA™. All rights reserved.

STEP 22



Disconnect three connectors from factory headlight.

STEP 23



Install three factory connectors to Anzo USA headlight.

STEP 24



Slide headlight into lower air dam when installing headlight.

STEP 25



Repeat steps 14-24 on opposite side to complete headlight installation.

STEP 26



Check all functions of light before operating vehicle.