


GM744 CV SILVERADO 19-21 Initiation Harness Installation Guide



OEM factory Headlight




STEP 1
Remove radiator shroud and radiator grill from vehicle.

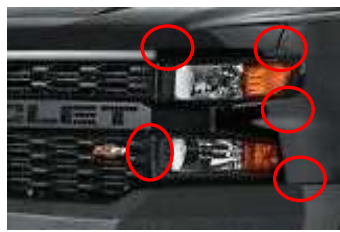

STEP 2
Remove headlight mounting bolts highlighted in red to remove factory headlight from vehicle.




STEP 3
Connect all connections to new headlight. Refer to Anzo USA YouTube Video Installation Instructions for in depth headlight removal and installation instructions.

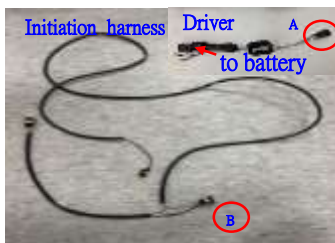

STEP 4
Locate provided Initiation head light harness. Connect (A) connector from LED driver to (B) connector on harness. Other side of LED driver will go to battery as shown in step 5.



STEP 5
Connect LED driver to battery on vehicle. Red wire to positive side (+), and black wire to negative side (-) of battery as shown.

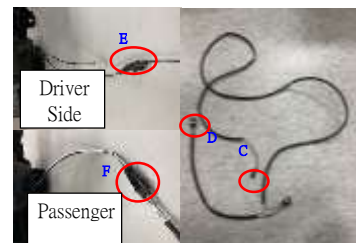

STEP 6
Connect Initiation Headlight harness to each light. Connector (C) to headlight connector (E) on driver side, Connector (D) to headlight connector (F) on passenger side



STEP 7
Test all functions of Headlights before driving vehicle on road.