

PRODUCT DESCRIPTION: Headlight
APPLICATION: 2014-15 Chevy Silverado



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: 10mm Socket. Panel popper. Philips screwdriver

STEP 1



Use the flat head screwdriver to remove pin holding in place the bumper guard

STEP 2




Use the panel popper to remove the 12 push pins holding in the radiator shroud.

STEP 3



Use the Phillips head screwdriver to remove the screw on both sides of bumper trim.

STEP 4

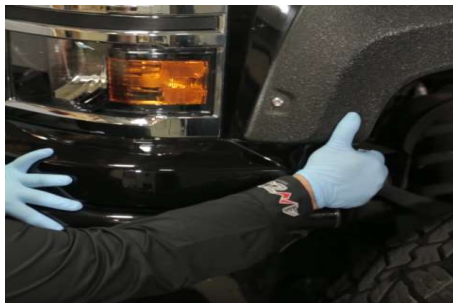

Pull the bumper trim away from the vehicle.

STEP 5



Use the 10mm socket to remove 4 top bolts and 4 bottom bolts on the grille.

STEP 6



Pull the grille away from the vehicle.

STEP 7



Locate and remove the two 10mm bolts on the top holding in the headlight in place.

STEP 8



Locate and remove the two 10mm bolts one on each side holding in the headlight in place.

STEP 9



Gently remove the headlight from the vehicle to expose the main wiring harness.

STEP 10



Disconnect the headlight wiring harness.

STEP 11



Reinstall the new headlights in reverse order.

STEP 12



Test all functions before driving.