

PRODUCT DESCRIPTION: Tail light
APPLICATION: 2016 -2018 Toyota Tacoma



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.




TOOLS NEEDED: 10mm Socket

STEP 1



Factory Tacoma Tail light

STEP 2

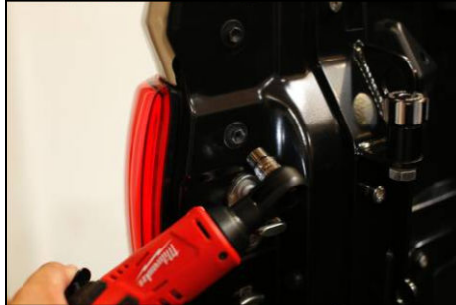

Lower tailgate then remove top and bottom 10 mm bolt.

STEP 3



Pull tail lights towards back of vehicle to remove.

STEP 4




Disconnect three connections on factory tail light and remove.

STEP 5




Using mild soap or rubbing alcohol clean surface in fender well then remove tape backing and attach resistor in fender well.

STEP 6

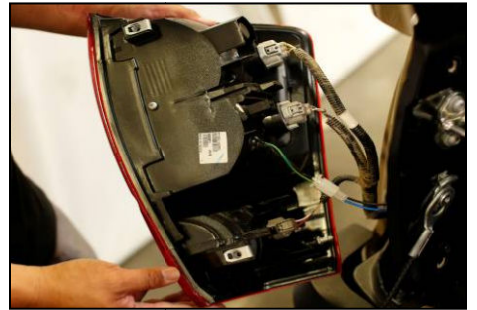

Connect 3 factory connections and resistor connection to Anzo USA tail light.

STEP 7

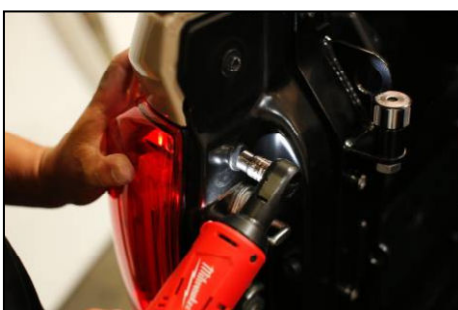

Install tail light making sure locating pins are inserted correctly then tighten top and bottom 10mm bolt.

STEP 8



Repeat steps 2-7 to install opposite side.

STEP 9



Check all functions of tail light before operating vehicle.