


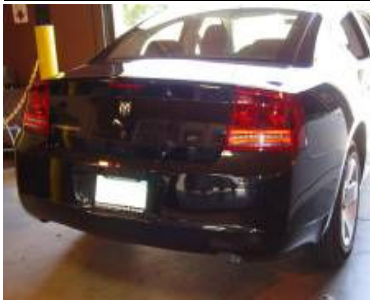



Description: Tail light
Part Number: 321012-321013-321014
Application: Dodge Charger 2006-2008



Tools needed: none

Step 1: Locate the two outer locking screws and remove them.

Step 2: locate the third locking screw and remove the screw.

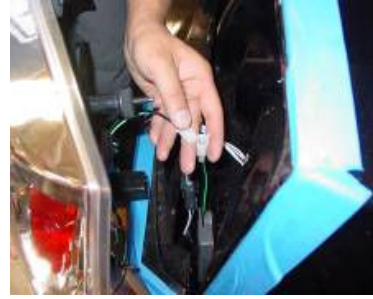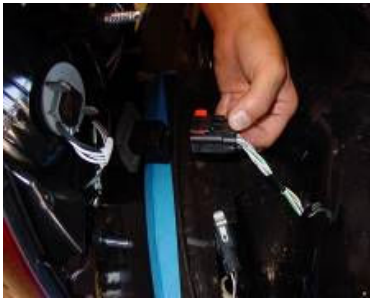

Step 3: pull off the tail light from the car and unplug the wire harness.

Step 4: Remove the protective tape from the resistor and place under the tail light behind the rear bumper.

Step 5: Plug in the resistor plug the put the tail light on the car.



Step 6: Once light is on the car plug the wire harness into the light and then screw the three locking screws in.

Step 7: Make sure all functions are working properly before driving.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith.