

**PRODUCT DESCRIPTION:** Tail light  
**APPLICATION:** 2018 Ford F-150



## INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION  
Improper installation may void warranty.



**TOOLS NEEDED:** 8mm Socket. Panel Popper

### STEP 1



Factory 2018 F-150 tail light

### STEP 2



Lower tail gate and remove two 8mm bolts.

### STEP 3



When removing tail light a panel popper might be needed to help release tail light.

### STEP 4



Pull tail light backwards from fender well to remove.

### STEP 5



Disconnect main connector harness from factory tail light.

### STEP 6




Clean surface area inside fender well with mild soap or rubbing alcohol to remove any dirt or grime.

### STEP 7




Remove 3m backing tape from resistors and press into fender well securely.

### STEP 8

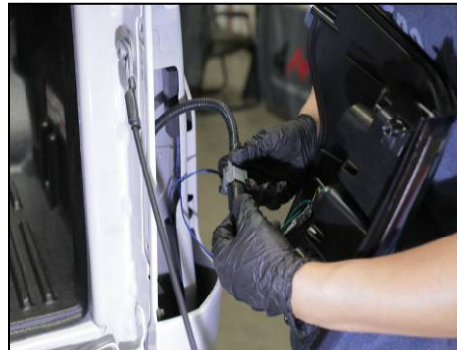

Connect both resistors and main connector to Anzo USA tail light.

### STEP 9

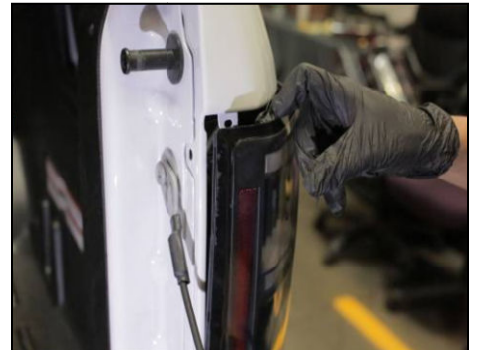

Slide Anzo USA tail light into fender well making sure to line up locating pins.

**STEP 10**



**After tail light has proper fitment install two 8mm bolts.**

**STEP 11**



**Repeat steps 2-10 on opposite side to finish installation.**

**STEP 12**



**Test all functions of tail lights before operating vehicle.**