


## Ford F150 2009-2014

### Ford F150 LED 3<sup>rd</sup> Brake Lamp with Cargo Lights (Wiring Instructions)

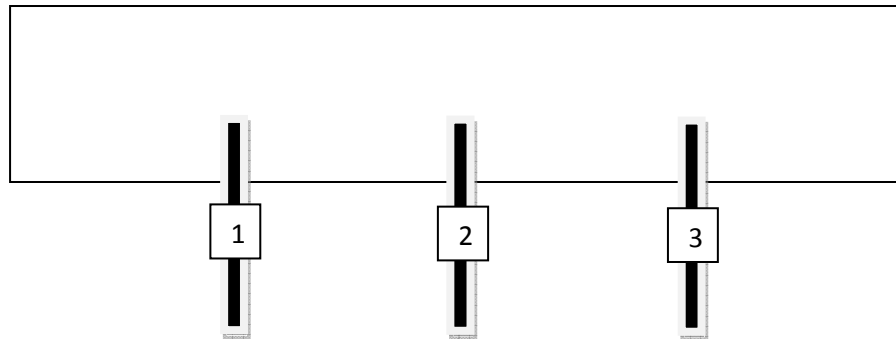

1. Please reference the table below to determine where the wires coming out of the back of your new **LED 3<sup>rd</sup> Brake Lamp** are to be connected on your truck.

Wire #	3 <sup>rd</sup> Brake Light	Factory Wiring Connection Point
1	Solid Black Wire	Splice to ground for Brake Light & Cargo – This wire is also solid BLACK.
2	Solid Red Wire	Splice to positive 12V for Brake Light – This wire is also solid RED.
3	Solid White Wire	Splice to positive 12V for Cargo Light – This wire is solid LIGHT BLUE.

2. There are two options to properly connect the **LED 3<sup>rd</sup> Brake Lamp** to your O.E. Wires:

Option 1: Cut off your three O.E. bulb connectors, and connect the wires of your new **LED 3<sup>rd</sup> Brake Lamp** to your O.E. wires as depicted in the wire color cross reference chart shown above.

Option 2: If you want to retain your O.E. connector plug, you must splice the wires a few inches before the O.E. connector plug by peeling back the O.E. wire covering/insulation and connect the wires as depicted in the wire color cross reference chart shown above.

Simply re-use your factory screws when mounting your new LED 3<sup>rd</sup> Brake Light. **DO NOT OVERTIGHTEN THEM.** Remember you are screwing down into a plastic housing and care is needed to ensure a nice snug fit that isn't so tight you crack the housing. Apply a little RTV silicone in the screw holes and on the gasket before you install to ensure a nice water-tight seal & enjoy your new **LED 3<sup>rd</sup> Brake Light** & remember **"DON'T GET LEFT IN THE DARK"**.